



Originale	Sostituto
1	1
2	2
3	3
Standby/On	Power
4	4
5	5
6	6
Display	Display / Media
7	7
8	8
9	9
Cancel	Exit / Cancel / Clear
10	0
+10	Guide / EPG / -/--
+100	Fav / Marker / PC
SET	Setup / OPT /
Sleep	Sleep / Timer

Originale	Sostituto
Group Up	CH+ / Page+
Clock/Timer	Shift + Sleep / Timer
<</>>	<< / Tune-
<</>>	I<< / Preset-
Stop/OK	Stop / Hold
Stop/OK	OK
>>/>>I	>> / Tune+
>>/>>I	>>I / Preset+
Group Down	CH- / Page-
Play/Pause iPod	Pause / Step / Freeze
Play/Pause CD	Play / Slow
Play/Pause USB	Shift + Play /
Audio In/FM	Audio / Lang I/II
Play Mode	Blue / Prime Video / Random
Repeat	Green / APP / Repeat
FM Mode/Menu	Menu / Home
Muting	Mute / Dimmer



