 

 


 

 

 

 



 
 
 

 




Originale	Sostituto
 Power	 Power
 1	 1
 2 abc	 2
 3 def	 3
 4 ghi	 4
 5 jkl	 5
 6 mno	 6
 7 p qrs	 7
 8 tuv	 8
 9 w xyz	 9
 0	 0
 Del	 Pre Ch
 Input Select	 AV
 Select Drive	 D. Menu
 Cast Vieta	 Media
 Function Menu	 Menu
 Direct Navigator	 List

Originale	Sostituto
 Guide	 Guide
 Return	 Back
 Option	 Options
 Exit	 Exit
 i / Status	 Info
 Pause / Pause Live Tv	 Pause
 Stop	 Stop
 Play/x1.3	 Play
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Prog/Check	 Sleep
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right





Originale	Sostituto
Left	Left
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Rec	Rec
Direct Tv Rec	TV/R
Rec Mode	Shift + Rec
Ext Link	Smart
Audio	Dual
[≡◆] / STTL	Subt
[≡] / Text	Text
Display	Shift + Info
Chapter	Format
Time Slip	3D
CH/Page+	Ch +
CH/Page-	Ch -

Originale	Sostituto
Vol + Tv	Vol +
Vol - Tv	Vol -
AV / Input Tv	Shift + AV
CH + Tv	Shift + Ch +
CH - Tv	Shift + Ch -
Power Tv	Shift + Power
Manual Skip +60s	Shift + Pre Ch
Manual Skip -10s	Shift + Guide

