




 
 
 



 
 

 








 



 



Originale	Sostituto
 Standby	 Power
 CAM	 Pre Ch
 TV/HDD	 TV/R
 Return	 Back
 Edit	 Format
 Timer	 AV
 Select	 Options
 Y/Tuner	 Text
 Menu/System	 D. Menu
 Menu/Disc	 Menu
 Info	 Info
 Vol+ Tv	 Vol +
 Vol- Tv	 Vol -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Originale	Sostituto
 HDD/Browser	 Media
 Guide/TV	 Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 CH+	 Ch +
 CH-	 Ch -
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 I<<	 I<<
 Rec/OTR	 Rec
 >>I	 >>I
 Jump Back	 <<
 Jump FWD	 >>





Originale		Sostituto	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	T/C		Eject
	Disc Manager		List

Originale		Sostituto	

