


 

 

 




 


 
 
 
 
 
 


 
 


 




 












 

 

 

 




















Originale		Sostituto		Originale		Sostituto	
	Power		Power		9		9
	CH.List		List		0		0
	Tv/Radio		TV/R		Info		Info
	FAV		Pre Ch		Recall		Back
	Sleep		Sleep		Freeze		Pause
	Input		AV		Guide		Guide
	Sound		Shift + Dual		I/II/Audio Lang		Dual
	Picture		Shift + Format		Vol+		Vol +
	Aspect		3D		Vol-		Vol -
	1		1		Mute		Mute
	2		2		Prog+		Ch +
	3		3		Prog/Page-		Ch -
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		OK		Ok





Originale		Sostituto	
	Menu		Menu
	Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Index	+	Shift + Info
	Hold		Options
	Text		Text
	Size		Format
	Subtitle		Subt
	Mix		Media
	Reveal		Smart
	Cancel		Eject
	Time	+	Shift + AV
	Subpage		D. Menu

Originale		Sostituto	

