

 


 
 
 
 


 



 

 

 
 
 

 

 

 

 





 







 




 


 
 



 
 


 



 







Originale		Sostituto		Originale		Sostituto	
	Standby/On		Power		7		7
	One Touch		Guide		8		8
	Open/close		Eject		9		9
	HDD		Smart		0		0
	DVD		Media		Show View		3D
	Audio		Dual		Clear		Exit
	Subtitle		Subt		CH+		Ch +
	Angle		Red		CH-		Ch -
	Play Mode		Shift + Play		Disc Navigator/Top		List
	TV/DVD		TV/R		Play List /Menu		Menu
	Input Select		AV		Home Menu		D. Menu
	1		1		Return		Back
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right
	5		5		Left		Left
	6		6		Enter		Ok





Originale	Sostituto
<</REV Scan	<<
>>/FWD Scan	>>
Play	Play
Stop/OK	Stop
Pause	Pause
I<</Prev	I<<
>>I/Next	>>I
<I/Step	Green
I>/Slow	Yellow
Rec	Rec
Stop Rec	SHIFT + Stop
CM Skip	Format
Rec Mode	SHIFT + Rec
Timer Rec	Sleep
Disc History	Text
CHP Mark	Pre Ch
Easy Timer	SHIFT + Sleep

Originale	Sostituto
Navi Mark	Options
Display	Info
Tv Direct Rec	Blue
Standby Tv	SHIFT + Power
Input Select Tv Control	SHIFT + AV
CH+ Tv Control	SHIFT + Ch +
CH- Tv Control	SHIFT + Ch -
Vol+ Tv Control	Vol +
Vol- Tv Control	Vol -

