





 


 


 

 



 





 






 
 







 



 





 


 
 

 


 
 




Originale	Sostituto	Originale	Sostituto
	Power		Power
	i		Info
	TV/DVD		TV/R
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Timer		Shift + AV
	Mute		Mute
	Input Select		AV
	TV/DVB-T		Media
	Guide (EPG)		Guide
	Exit/Cancel		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter/CH List		Ok
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Setup/Analog		Menu
	Digital Menu		Shift + D. Menu
	P↔P		Pre Ch
	Picture/Size		Format
	[≡]		Text



