 


 


 

 

 
 
 



 


 

 









 






| Originale  | Sostituto  |
|--|--|
|  Power      |  Power          |
|  Mute       |  Mute           |
|  Source     |  AV             |
|  P.Mode     |  Shift + Format |
|  S.Mode     |  Shift + Dual   |
|  Audio/I/II |  Dual           |
|  Sleep      |  Sleep          |
|  1          |  1              |
|  2          |  2              |
|  3          |  3              |
|  4         |  4             |
|  5        |  5            |
|  6        |  6            |
|  7        |  7            |
|  8        |  8            |
|  9        |  9            |
|  0        |  0            |

| Originale   | Sostituto   |
|---|---|
|  Radio/+10       |  Guide   |
|  Recall/Program  |  Back    |
|  Tv Menu         |  Menu    |
|  Exit            |  Exit    |
|  Goto/Text       |  Text    |
|  Display         |  Info    |
|  Up              |  Up      |
|  Down            |  Down    |
|  Right           |  Right   |
|  Left            |  Left    |
|  OK/Enter       |  Ok     |
|  Vol+          |  Vol + |
|  Vol-          |  Vol - |
|  P+            |  Ch +  |
|  P-            |  Ch -  |
|  Red/DVD Setup |  Red   |
|  Green/A-B     |  Green |





| Originale                 | Sostituto                                |
|---------------------------|--|
| ANGLE<br>Yellow/Angle     | <b>C</b> Yellow                          |
| REPEAT<br>Blue/Repeat     | <b>D</b> Blue                            |
| SUBTITLE<br>Subtitle      | <b>AD</b><br>SUBT Subt                   |
| HOLD<br>Play              | PLAY MODE<br>Play                        |
| HOLD<br>Pause/Hold        | <b>II</b> Pause                          |
| SIZE<br>Title/Size        | PICTURE<br>FORMAT Format                 |
| REVEAL<br>D.Dis/Reveal    | SETTINGS<br>OPT Options                  |
| MIX<br>D.Menu/MIX         | E-MANUAL<br>D.MENU D. Menu               |
| INDEX<br>Zoom/Index       | <b>SHIFT</b> + <b>ZOOM</b> Shift + Eject |
| FAV<br>I<</FAV            | <b>KK</b> I<<                            |
| SUBPAGE<br>>>I/Subpage    | <b>&gt;&gt;I</b> >>I                     |
| LANGUAGE<br>Stop/Language | <b>■</b> Stop                            |
| FAV-<br><</FAV-           | <b>&lt;&lt;</b> <<                       |
| FAV+<br>>>/FAV+           | <b>&gt;&gt;</b> >>                       |
| EPG<br>Eject/EPG          | <b>ZOOM</b><br>Eject                     |
| MEDIA<br>Media            | APP<br>MEDIA Media                       |
| REC<br>Rec                | REC MODE<br>Rec                          |

| Originale | Sostituto           |
|-----------|---------------------|
| [*]       | <b>ECO</b><br>3D 3D |
| T-SHIFT   | SEARCH<br>TV/R TV/R |
|           |                     |
|           |                     |
|           |                     |
|           |                     |
|           |                     |
|           |                     |
|           |                     |
|           |                     |
|           |                     |
|           |                     |
|           |                     |
|           |                     |
|           |                     |
|           |                     |
|           |                     |
|           |                     |
|           |                     |
|           |                     |
|           |                     |

