 


 


 

 

 
 
 



 


 

 









 




 

 



 

 



 


 
 
 
 
 


 

 
 
 


 



 




 
 

 

 





 
Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Source	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Audio/I/II	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 Radio/+10	 Guide
 Recall/Program	 Back
 Tv Menu	 Menu
 Exit	 Exit
 Goto/Text	 Text
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK/Enter	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Red/DVD Setup	 Red
 Green/A-B	 Green





Originale	Sostituto
 Yellow/Angle	 Yellow
 Blue/Repeat	 Blue
 Subtitle	 Subt
 Play	 Play
 Pause/Hold	 Pause
 Title/Size	 Format
 D.Dis/Reveal	 Options
 D.Menu/MIX	 D. Menu
 Zoom/Index	 Shift + Eject
 I<</FAV	 I<<
 >>I/Subpage	 >>I
 Stop/Language	 Stop
 <</FAV-	 <<
 >>/FAV+	 >>
 Eject/EPG	 Eject
 Media	 Media
 Rec	 Rec

Originale	Sostituto
 [*]	 3D
 T-Shift	 TV/R

