 
 



 
 



 





 
 




 

 
 

 
 
 
 






 








 






Originale	Sostituto
 Power	 Power
 Input D/A	 Smart
 Tv/Radio	 TV/R
 Input	 AV
 Bright-	 Shift + Left
 Bright+	 Shift + Right
 Simplink	 Media
 Text	 Text
 Ratio	 Format
 I-II	 Dual
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Stop	 Stop
 Play	 Play
 Pause	 Pause

Originale	Sostituto
 Rec	 Rec
 I<<	 I<<
 <<	 <<
 >>	 >>
 >>	 >>
 Menu	 Menu
 Back	 Back
 Exit	 Exit
 Info	 Info
 Guide	 Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 FAV	 Pre Ch
 Vol+	 Vol +

 




 

 






 

 
 
 
 
 






 





Originale	Sostituto	Originale	Sostituto
 Vol-	 Vol -	 Index/[≡i]	 Shift + Info
 Mute	 Mute	 Time/[≡o]	 D. Menu
 PR+	 Ch +	 Sleep	 Sleep
 PR-	 Ch -	 Hold/[≡+]	 Eject
 1	 1	 Reveal/[≡?]	 3D
 2	 2	 Subtitle	 Subt
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 List	 List		
 Q.View	 Options		
 Update/[≡x]	 Shift + Back		





Originale		Sostituto		Originale		Sostituto	
	Power		Power		4		4
	Stop		Stop		5		5
	Play		Play		6		6
	Pause		Pause		7		7
	I<<		I<<		8		8
	>>I		>>I		9		9
	<<		<<		0		0
	>>		>>				
	Menu		Menu				
	Up		Up				
	Down		Down				
	OK		Ok				
	Right		Right				
	Left		Left				
	1		1				
	2		2				
	3		3				





	Originale	Sostituto	Originale	Sostituto
	Power	Power		8
	Input	AV		9
	Stop	Stop		0
	Play	Play		
	Pause	Pause		
	Rec	Rec		
	<<	<<		
	>>	>>		
	PR+	Ch +		
	PR-	Ch -		
	1	1		
	2	2		
	3	3		
	4	4		
	5	5		
	6	6		
	7	7		

