



Originale	Sostituto
Power	Power
TV / Radio	TV/Radio /
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Aspect	Shift + Picture / Format
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
CH List / 10+	Shift + Guide / EPG / -/-
CH List / 10+	Smart / List

Originale	Sostituto
0	0
Recall	Back / Return
Vol+	Vol+
Mute	Mute / Dimmer
CH +	CH+ / Page+
Vol -	Vol-
Source	AV / Input / RDS
CH -	CH- / Page-
Nicam / Angle	Info / Angle
Nicam / Angle	Shift + Audio / Lang I/II
Menu	Menu / Home
Subtitle	Subtitle / EQ
i / Display	Display / Media
Exit	Exit / Cancel / Clear
Return	Shift + Back / Return
Up	Up
Left	Left





Originale	Sostituto
OK	OK
Right	Right
Record / Eject	Rec / Rec Mode
Record / Eject	Eject / Surround
Down	Down
EPG / DVD	Setup / OPT /
EPG / DVD	Guide / EPG / -/-
Red / Goto DVD	Red / Netflix / Search
Red / Goto DVD	Shift + Text /
Green / Slow DVD	Green / APP / Repeat
Yellow / Repeat	Yellow / YouTube / Repeat
Yellow / Repeat	Shift + Green / APP /
Blue / A-B DVD	Blue / Prime Video / Random
Blue / A-B DVD	Shift + Yellow / YouTube /
Play	Play / Slow
Pause / Timeshift	Pause / Step / Freeze
Stop / FAV	Fav / Marker / PC

Originale	Sostituto
Stop / FAV	Stop / Hold
[≡i] / Audio / Index	Audio / Lang I/II
I<<	I<< / Preset-
[ /≡] / Text	Text / Goto
<< / Cancel	<< / Tune-
[≡x] / Cancel	Shift + Exit / Cancel / Clear
[≡♦] / Freeze	Shift + Pause / Step /
Size / DVD Title	Zoom / Size
Size / DVD Title	Shift + Sound / Title
>>	>>  / Preset+
[≡+] / Hold	Shift + Stop /
>>	>> / Tune+
[≡?] / Reveal	Shift + OK
[≡o] / Subpage / DVD Menu	D.Menu / Top

