

 


 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Green/Slow		Green
	I<<		I<<		Yellow/Repeat		Yellow
	Eject		Eject		Blue/A-B		Blue
	<<		<<		CH+		Ch +
	>>		>>		CH-		Ch -
	>>		>>		Tv-Menu		Menu
	Play		Play		TV/AV		AV
	Pause		Pause		Vol+		Vol +
	Stop		Stop		Vol-		Vol -
	TV/TXT/Langua		Text		DTV		Shift + Smart
	Cancel/Zoom		Shift + Eject		DVD Setup		D. Menu
	Reveal/Subtitle		3D		Exit		Exit
	Hold/Menu		Smart		Display		Shift + Info
	Size/Angle		Format		Up		Up
	Subpage/Title		Options		Down		Down
	Index/Goto		Media		Right		Right
	Red/Program		Red		Left		Left





Originale	Sostituto
OK	Ok
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	+  Shift + Guide
Recall	Back
Picture	+  Shift + Format
Sound	+  Shift + Dual
Nicam/A2	Dual
Mute	Mute

Originale	Sostituto
Sleep	Sleep
Info	Info
Subtitle	Subt
Channel List	List
EPG	Guide
Tv/Radio	TV/R
FAV	Pre Ch

