 

 

 



 



 
 




 







 


 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Auto	 Smart
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Display	 Shift + Info
 Audio / Nicam	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 -/--	 Shift + Guide
 Recall	 Back
 Tv Menu	 Menu
 Exit	 Exit
 Guide	 Guide
 Source	 AV
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 CH-	 Ch -
 CH+	 Ch +
 Vol-	 Vol -
 Vol+	 Vol +
 Text	 Text
 <<	 <<



