



Originale	Sostituto
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Info / Angle
	0
	AV / Input / RDS
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat

Originale	Sostituto
	Blue / Prime Video / Random
	Setup / OPT /
	Up
	Menu / Home
	Left
	OK
	Right
	Text / Goto
	Down
	Back / Return
	CH+ / Page+
	Vol+
	CH- / Page-
	Vol-
	Smart / List
	<< / Tune-
	TV/Radio /





Originale		Sostituto		Originale		Sostituto	
	Play		Play / Slow				
	Guide/[♦]		Guide / EPG / -/--				
	>>		>> / Tune+				
	[^]/Timer		Display / Media				
	Rec/Top Menu		D.Menu / Top				
	Rec/Top Menu		Rec / Rec Mode				
	I-II/[X]		Audio / Lang I/II				
	Stop		Stop / Hold				
	[...]/[≡i]		Subtitle / EQ				
	Pause		Pause / Step / Freeze				
	Zoom		Zoom / Size				
	(↔)		Sound / Title				



