

 





 











 

 

 
 

 

 

 




Originale	Sostituto
 Standby	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info/Display	 Info
 Q-Play/Tv/Radio	 TV/R
 Menu/PgDn	 Menu
 Setup	 Options
 Exit/Slow	 Exit

Originale	Sostituto
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Next	 >>
 Prev	 <<
 Rew	 <<
 FF	 >>





Originale	Sostituto
Play	Play
Stop	Stop
Pause	Pause
Subtitle	Subt
Audio	Dual
List/PBC	List
Title/PgUp	D. Menu
Return	Back
Rec/Repeat	Rec
PVR/Zoom	Shift + Eject
FAV/A-B	Pre Ch
Video	AV
TTX/Search	Text
DVD/DVB	Media
Step	Format
EPG/P/N	Guide
Angle	3D

Originale	Sostituto
Random	Sleep
Mute	Mute
USB	Smart

