














 

 

 


 















| Originale | | Sostituto | | Originale | | Sostituto | |
|-----------|--------|-----------|----------------------|-----------|----------------|-----------|-----------------------------|
| | Power | | Power | | 0 | | 0 |
| | [≡] | | Text / Goto | | Source | | AV / Input / RDS |
| | [≡?] | | Shift + Info / Angle | | DTV | | Shift + D.Menu / Top Menu |
| | [...] | | Subtitle / EQ | | EPG | | Guide / EPG / -/- |
| | [≡+] | | Stop / Hold | | ESG | | Shift + Setup / OPT / Tools |
| | [≡O] | | Sleep / Timer | | Radio | | TV/Radio / |
| | [≡◆] | | Zoom / Size | | ▼/O)/I/II/I+II | | Shift + Down |
| | 1 | | 1 | | Vol+ | | Vol+ |
| | 2 | | 2 | | P+ | | CH+ / Page+ |
| | 3 | | 3 | | AV Mode | | Shift + AV / Input / RDS |
| | 4 | | 4 | | Mute | | Mute / Dimmer |
| | 5 | | 5 | | Vol- | | Vol- |
| | 6 | | 6 | | P- | | CH- / Page- |
| | 7 | | 7 | | Surround | | Eject / Surround |
| | 8 | | 8 | | DTV Menu | | D.Menu / Top |
| | 9 | | 9 | | List | | Smart / List |
| | Recall | | Back / Return | | [i+] | | Info / Angle |





| Originale | Sostituto |
|---|---|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

| Originale | Sostituto |
|-----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

