 

 





 






 

 







 

 

 

 



 

 

 









 
 
 




















Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Skip/[≡?]	 Eject
 Display	 Info	 [≡◇]	 3D
 Status	 Smart	 Time	 Shift + AV
 Picture/Size	 Format	 Mute	 Mute
 1	 1	 Menu	 Menu
 2	 2	 Text/[≡]	 Text
 3	 3	 Normal	 TV/R
 4	 4	 [≡+]	 D. Menu
 5	 5	 Up	 Up
 6	 6	 Down	 Down
 7	 7	 Right	 Right
 8	 8	 Left	 Left
 9	 9	 Enter	 Ok
 0	 0	 PR+	 Ch +
 AV	 AV	 PR-	 Ch -
 P--P	 Pre Ch	 Vol+	 Vol +
 Audio 1/2	 Dual	 Vol-	 Vol -





Originale		Sostituto		Originale		Sostituto	
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

