
 

 

 




 

 

 

 

 

 
 

 

 

 

 

 

 

 


 
 

 



 

Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DTV/ATV	 Shift + TV/Radio / Program
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Originale	Sostituto
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Vol+	 Vol+
 MTS	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Aspect	 Shift + Picture / Format
 CH-	 CH- / Page-
 FAV/List	 Fav / Marker / PC
 Media	 Shift + Display / Media





Originale	Sostituto
 Freeze	 Pause / Step / Freeze
 Guide	 Guide / EPG / --
 <<	 << / Tune-
 >>	 >> / Tune+
 I<</Cancel	 I<< / Preset-
 >>I/Sub.Pg	 >>I / Preset+
 Stop/Index	 Stop / Hold
 Play/Pause/Timeshift	 Play / Slow
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Reveal	 Shift + Back / Return
 Size	 Zoom / Size
 Hold	 Shift + Stop /
 Text	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Originale	Sostituto
 Cyan	 Blue / Prime Video / Random

