
 
 
 

 
 
 











Originale	Sostituto
 Power	 Power
 Display	 Info
 Timer Menu	 Menu
 Sleep	 Sleep
 Audio In Function	 Red
 FM Function	 Green
 CD Function	 Yellow
 USB Function	 Blue
 EQ	 Dual
 FM Mode	 TV/R
 1 Tuner Memory Number	 1
 2 Tuner Memory Number	 2
 3 Tuner Memory Number	 3
 4 Tuner Memory Number	 4
 5 Tuner Memory Number	 5
 6 Tuner Memory Number	 6
 Tuner Memory	 Guide

Originale	Sostituto
 Play Mode / Tuning Mode	 Shift + Play
 Bass Boost	 Subt
 Return	 Back
 Repeat	 Text
 Volume+	 Vol +
 Volume-	 Vol -
 Up/Folder+	 Up
 Down/Folder-	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 I<</Preset-	 I<<
 Pause	 Pause
 >>I/Preset+	 >>I
 <</Tuning-	 <<
 Play	 Play
 >>/Tuning+	 >>





Originale		Sostituto	
	Stop		Stop
	Clear		Exit

Originale		Sostituto	

