




















Originale	Sostituto	Originale	Sostituto
Power		Power	EQ SUBTITLE
OK		Subtitle	Subtitle / EQ
Up		Settings	Setup / OPT /
Down		>>	PRESET+ >>I / Preset+
Right		>>	TUNE+ >> / Tune+
Left		Play	SLOW Play / Slow
Back		AD / PIP	TITLE SOUND
Vol +		<<	PRESET- I<< / Preset-
Vol -		<<	TUNE- << / Tune-
Home / Smart		Rec	REC MODE Rec / Rec Mode
3D	 +  3	Pause	STEP-FREEZE Pause / Step / Freeze
Mute		Text	GOTO TEXT
P +		FAV	PC FAV MARKER
P -		Exit	CLEAR EXIT
Ratio		Input	RDS AV INPUT
List		Blue	Prime Video RANDOM
Q.Menu		Yellow	YouTube REPEAT A-B
		Stop / Live TV	HOLD Stop / Hold

Menu



Originale	Sostituto	
AV Mode	 Shift + AV / Input / RDS	
Green	 Green / APP / Repeat	
Red	 Red / Netflix / Search	
0	 0	
AD	 Audio / Lang I/II	
TV / PC	 Shift + Fav / Marker / PC	
Search	 Shift + Red / Netflix /	
App	 Shift + Green / APP /	
TV / Radio	 TV/Radio /	
Guide	 Guide / EPG / -/--	
Info	 Info / Angle	
Recent	 Sleep / Timer	
9	 9	
8	 8	
7	 7	
Live Menu	 Display / Media	
6	 6	

Originale	Sostituto	
5	 5	
Q.View	 Shift + Display / Media	
4	 4	
Live Zoom	 Zoom / Size	
3	 3	
2	 2	
1	 1	
T.Opt	 Shift + Setup / OPT / Tools	
Energy Saving	 Eject / Surround	
My APPS	 Shift + Smart / List	

