



















Originale	Sostituto	Originale	Sostituto
Power		Power	EQ SUBTITLE
OK		Subtitle	Subtitle / EQ
Up		Settings	Setup / OPT /
Down		>>	PRESET+ >>I / Preset+
Right		>>	TUNE+ >> / Tune+
Left		Play	SLOW Play / Slow
Back		AD / PIP	TITLE SOUND
Vol +		<<	PRESET- I<< / Preset-
Vol -		<<	TUNE- << / Tune-
Home / Smart		Rec	REC MODE Rec / Rec Mode
3D	 +  3	Pause	STEP-FREEZE Pause / Step / Freeze
Mute		Text	GOTO TEXT
P +		FAV	PC FAV MARKER
P -		Exit	CLEAR EXIT
Ratio		Input	RDS AV INPUT
List		Blue	Prime Video RANDOM
Q.Menu		Yellow	YouTube REPEAT A-B
		Stop / Live TV	HOLD Stop / Hold



Originale	Sostituto	Originale	Sostituto
AV Mode	Shift + AV / Input / RDS	5	5
Green	Green / APP / Repeat	Q.View	Shift + Display / Media
Red	Red / Netflix / Search	4	4
0	0	Live Zoom	Zoom / Size
AD	Audio / Lang I/II	3	3
TV / PC	Shift + Fav / Marker / PC	2	2
Search	Shift + Red / Netflix /	1	1
App	Shift + Green / APP /	T.Opt	Shift + Setup / OPT / Tools
TV / Radio	TV/Radio /	Energy Saving	Eject / Surround
Guide	Guide / EPG / -/--	My APPS	Shift + Smart / List
Info	Info / Angle		
Recent	Sleep / Timer		
9	9		
8	8		
7	7		
Live Menu	Display / Media		
6	6		

