

































































 
 




Originale	Sostituto	Originale	Sostituto
Power		Power	
OK		OK	
Up		Up	
Down		Down	
Right		Right	
Left		Left	
Back		Back / Return	
Vol +		Vol+	
Vol -		Vol-	
Home / Smart		Menu / Home	
3D	 +  Shift + 3	Shift + 3	 +  Shift + 3
Mute		Mute / Dimmer	
P +		CH+ / Page+	
P -		CH- / Page-	
Ratio		Picture / Format	
List		Smart / List	
Q.Menu		D.Menu / Top	
Subtitle		Subtitle / EQ	
Settings		Setup / OPT /	
>>		>>I / Preset+	
>>		>> / Tune+	
Play		Play / Slow	
AD / PIP		Sound / Title	
<<		I<< / Preset-	
<<		<< / Tune-	
Rec		Rec / Rec Mode	
Pause		Pause / Step / Freeze	
Text		Text / Goto	
FAV		Fav / Marker / PC	
Exit		Exit / Cancel / Clear	
Input		AV / Input / RDS	
Blue		Blue / Prime Video / Random	
Yellow		Yellow / YouTube / Repeat	
Stop / Live TV		Stop / Hold	



Originale	Sostituto	Originale	Sostituto
AV Mode	+ Shift + AV / Input / RDS	5	5
Green	Green / APP / Repeat	Q.View	+ Shift + Display / Media
Red	Red / Netflix / Search	4	4
0	0	Live Zoom	Zoom / Size
AD	Audio / Lang I/II	3	3
TV / PC	+ Shift + Fav / Marker / PC	2	2
Search	+ Shift + Red / Netflix /	1	1
App	+ Shift + Green / APP /	T.Opt	+ Shift + Setup / OPT / Tools
TV / Radio	TV/Radio /	Energy Saving	Eject / Surround
Guide	Guide / EPG / -/--	My APPS	+ Shift + Smart / List
Info	Info / Angle		
Recent	Sleep / Timer		
9	9		
8	8		
7	7		
Live Menu	Display / Media		
6	6		

