





 

 
 
 




















 
 



Originale	Sostituto	Originale	Sostituto
Power		Power	EQ SUBTITLE
OK		Subtitle	Subtitle / EQ
Up		Settings	Setup / OPT /
Down		>>	PRESET+ PRESET+
Right		>>	>>I / Preset+
Left		>>	TUNE+ >> / Tune+
Back		Play	SLOW Play / Slow
Vol +		AD / PIP	TITLE SOUND
Vol -		<<	PRESET- I<< / Preset-
Home / Smart		<<	TUNE- << / Tune-
3D	 +  3	Rec	REC MODE Rec / Rec Mode
Mute		Pause	STEP-FREEZE Pause / Step / Freeze
P +		Text	GOTO TEXT
P -		FAV	PC FAV MARKER
Ratio		Exit	CLEAR EXIT
List		Input	RDS AV INPUT
Q.Menu		Blue	Prime Video RANDOM
		Yellow	YouTube REPEAT A-B
		Stop / Live TV	HOLD Stop / Hold



Originale	Sostituto	
AV Mode	 + 	Shift + AV / Input / RDS
Green		Green / APP / Repeat
Red		Red / Netflix / Search
0		0
AD		Audio / Lang I/II
TV / PC	 + 	Shift + Fav / Marker / PC
Search	 + 	Shift + Red / Netflix /
App	 + 	Shift + Green / APP /
TV / Radio		TV/Radio /
Guide		Guide / EPG / -/--
Info		Info / Angle
Recent		Sleep / Timer
9		9
8		8
7		7
Live Menu		Display / Media
6		6

Originale	Sostituto	
5		5
Q.View	 + 	Shift + Display / Media
4		4
Live Zoom		Zoom / Size
3		3
2		2
1		1
T.Opt	 + 	Shift + Setup / OPT / Tools
Energy Saving		Eject / Surround
My APPS	 + 	Shift + Smart / List

