 

 

 
 
 

 



 
 


 

 

 
 
 



 

 



 

 


 



 



 

 
 
 
 

 
 


 
 

 
 


 








Originale		Sostituto		Originale		Sostituto	
	Power		Power		9		9
	Time/Play		Format		0		0
	Clock/Timer		AV		+10		Pre Ch
	Dimmer		Media		DEL		D. Menu
	Auto Off		Blue		Program		Shift + Sleep
	Sleep		Sleep		Repeat		Text
	Vol+		Vol +		Play Mode		Shift + Play
	Vol-		Vol -		USB Play/Pause		Pause
	Mute		Mute		CD Play/Pause		Play
	1		1		AUX		Green
	2		2		I<</<<		<<
	3		3		Radio		TV/R
	4		4		>>/>>I		>>
	5		5		Stop		Stop
	6		6		Re-Master		Back
	7		7		D.Bass		Exit
	8		8		Display		Info





Originale	Sostituto
Surround	Dual
Bass	Subt
Preset EQ	Options
Treble	Smart
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
Auto Preset	Guide
Tune Mode	Red
FM Mode	Yellow
Input Level	3D

Originale	Sostituto

