







 


 



 

 

 



 
 
 
 

 



 

 
 
 
 
 


 


 
 

 

 



 

 
 


 






 
 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 P+	 Ch +
 Source	 AV	 P-	 Ch -
 1	 1	 i	 Info
 2	 2	 Menu	 Menu
 3	 3	 Q.Menu	 D. Menu
 4	 4	 Back	 Back
 5	 5	 Exit	 Exit
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 Ok
 Tv	 TV/R	 World	 Media
 Recall	 Pre Ch	 Music-Photo-Vide	 Options
 Vol+	 Vol +	 Guide	 Guide
 Vol-	 Vol -	 */o	 Format
 Mute	 Mute	 */Q	 3D

Originale	Sostituto	Originale	Sostituto
 P+	 Ch +	 TV	 AUX
 P-	 Ch -	 DVD	 SAT
 i	 Info	 PLAY MODE	 REC MODE
 Menu	 Menu	 TV	 STOP
 Q.Menu	 D. Menu	 LEFT	 RIGHT
 Back	 Back	 DUAL	 SUBT
 Exit	 Exit	 AD	 OPT
 Up	 Up	 SOUND	 PICTURE
 Down	 Down	 E-MANUAL	 ECO
 Right	 Right	 D.MENU	 3D
 Left	 Left	 REPEAT	 TIMER
 OK	 Ok	 ZOOM	 AV
 World	 Media	 TOP MENU	 DISPLAY
 Music-Photo-Vide	 Options	 MENU	 INFO
 Guide	 Guide	 OK	 EXIT
 */o	 Format	 RETURN	 BACK
 */Q	 3D	 CLEAR	 HOME





Originale		Sostituto		Originale		Sostituto	
	Text		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Lang.		Dual				
	[≡]..		Subt				
	[-o-]		Smart				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

