
 

 

 





 

 







 

 




 



Originale	Sostituto
 Power	 Power
 Sleep- Auto Off	 Sleep
 Clock/Timer	 AV
 Timer Play/Timer Rec	 3D
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Disc	 Pre Ch
 Display	 Info

Originale	Sostituto
 Dimmer	 Media
 Play Mode	 Shift + Play
 Program	 Menu
 AUX	 Red
 Tuner	 Green
 Tape <>	 Pause
 CD Play/Pause	 Play
 I<</REW/Down	 I<<
 Up/FF/>>I	 >>I
 Stop/Clear	 Stop
 S.Sound EQ	 Dual
 Preset EQ	 Options
 Vol+	 Vol +
 Vol-	 Vol -
 Muting	 Mute

