















 





















Originale	Sostituto
 Power	 Power
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 USB	 Shift + 8
 Search	 Shift + Green / APP /
 */Settings	 Setup / OPT /
 Tv Guide	 Guide / EPG / -/--
 List	 Shift + Smart / List
 Sources	 AV / Input / RDS
 Smart Tv	 Smart / List
 Home	 Menu / Home
 Exit/TV	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search

Originale	Sostituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 i	 Info / Angle
 Up	 Up
 Options	 Shift + Setup / OPT / Tools
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 [<>]	 Picture / Format
 Vol+	 Vol+
 Netflix	 Shift + Red / Netflix /
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer





Originale		Sostituto		Originale		Sostituto	
	CH-		CH- / Page-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Subtitle		Subtitle / EQ				
	0		0				
	Text		Text / Goto				

