




















 



 



 







Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Step	 Format
 3D	 3D
 S.Fit	 List
 Zoom	 Shift + Eject
 Digest	 TV/R

Originale	Sostituto
 <<	 <<
 >>	 >>
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Top Menu	 Shift + Menu
 Menu	 Menu
 Return	 Back
 Display	 Info
 Clear	 Exit
 Mode	 AV
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left



