 

 




 





















Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Lang	 Audio / Lang I/II
 0	 0
 TXT	 Text / Goto
 Home	 Smart / List
 Home	 D.Menu / Top
 Vol+	 Vol+

Originale	Sostituto
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 [G]	 Menu / Home
 Up	 Up
 i	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode





Originale		Sostituto		Originale		Sostituto	
	Play		Play / Slow				
	Stop		Stop / Hold				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

