





 



 



 






 

 






Originale

Sostituto

	Power		Power
	Open/Close		Eject
	DVD		Red
	Tuner		Green
	Video		Yellow
	TV/AUX		Blue
	Sleep		Sleep
	I<<		I<<
	<<		<<
	>>		>>
	>>I		>>I
	Play		Play
	Stop		Stop
	SP.Setup		Media
	CH-Level		Guide
	SR.Mode		List
	Title		Info

Originale

Sostituto

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Setup		Options
	Pause/Step		Pause
	Menu/Return		Menu
	Goto Auto		Back
	1		1
	2		2
	3		3
	4		4
	5		5





Originale		Sostituto	
	6		6
	7		7
	8		8
	9		9
	0		0
	DISP/FM mode		TV/R
	Delay Time		Exit
	Test Tone		Format
	Subtitle		Subt
	Slow		AV
	Audio		Dual
	A-B		Smart
	Zoom		Shift + Eject
	Angle		3D
	Random		D. Menu
	Repeat		Text
	Digest RDS		Shift + Subt

Originale		Sostituto	
	MPX PTY Search		Shift + AV
	PBC		Shift + TV/R



Mode