
 







 

 







 







 
 











Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Back	 Back
 P.Mode	 Shift + Format
 S.Mode	 Dual
 Sleep	 Sleep

Originale	Sostituto
 NICAM	 Smart
 Menu	 Menu
 Source	 AV
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Exit	 Exit
 Display	 Info
 Vol +	 Vol +
 Vol -	 Vol -
 List	 List
 Fav List	 Pre Ch
 CH +	 Ch +
 CH -	 Ch -
 TV / Radio	 TV/R





Originale	Sostituto
CPG	Media
Aspect	Format
Freeze	Pause
Index	D. Menu
Cancel	Shift + Back
Subpage	Subt
Text	Text
Reveal	Options
Size	3D
Hold	Stop
Mix	Rec
Red	Red
Green	Green
Yellow	Yellow
Cyan	Blue

Originale	Sostituto

