 


 

 


 
 

 
 
 

 

 
 
 

 






 



 





Originale	Sostituto
	
Power	Power
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8
	
9	9
	
0	0
	
AV	AV
	
-/--	Guide
	
P +	Ch +
	
P -	Ch -
	
V +	Vol +
	
V -	Vol -

Originale	Sostituto
	
Mute	Mute
	
TV	TV/R
	
Back	Back
	
Menu	Menu
	
Up	Up
	
Down	Down
	
Right	Right
	
Left	Left
	
OK	Ok
	
I-II	Dual
	
Text	Text
	
i	Info
	
Play / Pause	Play
	
Play / Pause	Pause
	
Stop	Stop
	
Rec	Rec
	
Red	Red



