




 










 




Originale	Sostituto
 Vol+	 Vol+
 Menu	 Menu / Home
 P+	 CH+ / Page+
 Vol-	 Vol-
 Silence	 Mute / Dimmer
 P-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Retour	 Back / Return
 Pilote	 Guide / EPG / -/--
 Sortie	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3

Originale	Sostituto
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV/TNT	 TV/Radio /
 0	 0
 Marche/Arret	 Power

