


 








 

 

 
 

 


 
 
 

 
 
 

 

 
 
 

 

 

 

 



 
 


 
 
 

 




 












Originale		Sostituto		Originale		Sostituto	
	Power		Power		i		Info
	AV		AV		P+		Ch +
	1		1		P-		Ch -
	2		2		Menu		Menu
	3		3		Exit		Exit
	4		4		Option		Options
	5		5		Back/Return		Back
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		OK		Ok
	Still		Format		TV		TV/R
	Recall		Pre Ch		Media		Media
	Vol+		Vol +		Guide		Guide
	Vol-		Vol -		[+]		3D
	Mute		Mute		Timer		Shift + AV





Originale	Sostituto	Originale	Sostituto
TEXT	Text	REPEAT TEXT	Text
Red	Red	A	Red
Green	Green	B	Green
Yellow	Yellow	C	Yellow
Blue	Blue	D	Blue
AUDIO	Audio	SOUND DUAL	Dual
STTL	STTL	AD SUBT	Subt
SOUND	Sound	SHIFT + SOUND DUAL	Shift + Dual
<<	<<	<<	<<
Pause	Pause	Pause	Pause
>>	>>	>>	>>
Rec	Rec	REC MODE	Rec
Play	Play	PLAY MODE	Play
Stop	Stop	Stop	Stop

Originale	Sostituto

