



Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 Subtitle	 Subt
 Info/Menu	 Menu
 Disc Menu	 D. Menu
 Home	 Smart
 Back	 Back
 Sleep	 Sleep
 Function	 AV
 Title/PopUp	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Play	 Play
 Pause/Step	 Pause
 Stop	 Stop
 << Scan	 <<

Originale	Sostituto
 Scan >>	 >>
 I<< Skip	 I<<
 Skip >>I	 >>I
 Enter	 Ok
 Up/Presets+	 Up
 Down/Presets-	 Down
 Left/Tuning-	 Left
 Right/Tuning+	 Right
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue/Mono/Stereo	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Originale		Sostituto		Originale		Sostituto	
	6		6		PR/CH- Tv		Ch -
	7		7		Vol+ Tv		Shift + Vol +
	8		8		Vol- Tv		Shift + Vol -
	9		9		Mute Tv		Shift + Mute
	0		0				
	Rec		Rec				
	Audio		Dual				
	MIC/ECHO		Options				
	Repeat		Text				
	Clear		Exit				
	*		Guide				
	Optical/Tv Sound		TV/R				
	Sound Effect		3D				
	Speaker Level		Format				
	Power Tv		Shift + Power				
	AV/Input Tv		Shift + AV				
	PR/CH+ Tv		Ch +				

