



Originale	Sostituto	Originale	Sostituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back / Return
	Vol+		Vol+
	Audio/Audio/Lang/ MTS		Audio / Lang I/II
	Exit/Exit		Exit / Cancel / Clear

Originale	Sostituto	Originale	Sostituto
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	LCD Menu		Shift + D.Menu / Top Menu
	Down		Down
	DVB Menu		D.Menu / Top
	Input		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Info/Display		Info / Angle
	Zoom/P.Ratio		Zoom / Size
	Tv/Radio		TV/Radio /



