


 

 

 



 

 

 



 







 

















 


 



 




 



 

 











Originale		Sostituto		Originale		Sostituto	
	Power		Power		6		6
	Mute		Mute		7		7
	[<>]		Format		8		8
	♪		Dual		9		9
	[]		3D		0		0
	PAT		Smart		Zoom		Eject
	PIP Sel		Play		Swap		Pre Ch
	PIP Pos		Pause		Swap		Back
	PIP Size		Stop		PR-		Ch -
	AV		AV		PR+		Ch +
	PC		Media		Vol-		Vol -
	TV		TV/R		Vol+		Vol +
	1		1		Up		Up
	2		2		Right		Right
	3		3		Down		Down
	4		4		Left		Left
	5		5		OK / Freeze		Ok





Originale		Sostituto		Originale		Sostituto	
	Info		Info				
	Menu		Menu				
	[+]		Options				
	[?]		D. Menu				
	[♦]		Subt				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Text / Mix		Text				
	[≡x]		Exit				
	[≡≡]		Guide				

