




 



 

 









 

 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 [<>]	 Format
 ♪	 Dual
 []	 3D
 PAT	 Smart
 PIP Sel	 Play
 PIP Pos	 Pause
 PIP Size	 Stop
 AV	 AV
 PC	 Media
 TV	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5

Originale	Sostituto
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Zoom	 Eject
 Swap	 Pre Ch
 Swap	 Back
 PR-	 Ch -
 PR+	 Ch +
 Vol-	 Vol -
 Vol+	 Vol +
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK / Freeze	 Ok





Originale		Sostituto		Originale		Sostituto	
	Info		Info				
	Menu		Menu				
	[+]		Options				
	[?]		D. Menu				
	[\diamond]		Subt				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Text / Mix		Text				
	[≡x]		Exit				
	[:\equiv]		Guide				

