



Originale	Sostituto
 Power	 Power
 Mute	 Mute
 [ <> ]	 Format
 ♪	 Dual
 [ ]	 3D
 PAT	 Smart
 PIP Sel	 Play
 PIP Pos	 Pause
 PIP Size	 Stop
 AV	 AV
 PC	 Media
 TV	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5

Originale	Sostituto
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Zoom	 Eject
 Swap	 Pre Ch
 Swap	 Back
 PR-	 Ch -
 PR+	 Ch +
 Vol-	 Vol -
 Vol+	 Vol +
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK / Freeze	 Ok





Originale	Sostituto
Info	Info
Menu	Menu
[+]	Options
[?]	D. Menu
[◆]	Subt
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Text / Mix	Text
[≡x]	Exit
[≡:]	Guide

Originale	Sostituto

