





 

 

 



 



 













 





Originale	Sostituto
 Open/Close	 Eject / Surround
 Standby	 Power
 Source	 AV / Input / RDS
 Function	 D.Menu / Top
 TFT On/Off	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Shift + Guide / EPG / -/-

Originale	Sostituto
 Setup	 Setup / OPT /
 Return	 Back / Return
 Up	 Up
 Pre/Tun	 Fav / Marker / PC
 Left	 Left
 Enter	 OK
 Right	 Right
 Memo	 Sleep / Timer
 Down	 Down
 Auto	 Rec / Rec Mode
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Vol-	 Vol-
 Vol+	 Vol+
 CH-	 CH- / Page-
 CH+	 CH+ / Page+





Originale	Sostituto
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Zoom	Zoom / Size
Prog	Shift + TV/Radio / Program
Slow	Shift + Play /
A-B	Yellow / YouTube / Repeat
Goto	Text / Goto
Title	Sound / Title
Menu	Menu / Home
Display	Display / Media
Subtitle	Subtitle / EQ
N/P	Red / Netflix / Search
Language	Audio / Lang I/II
Angle	Info / Angle
Resume	Smart / List

Originale	Sostituto
Repeat	Green / APP / Repeat
R/L	Blue / Prime Video / Random
4:3/16:9	Picture / Format
EPG	Guide / EPG / -/-
Tv/Radio	TV/Radio /
Video	Shift + 4
EQ	Shift + Subtitle / EQ

