 

 

 




 
 
 
 

 
 
 

 
 
 

 

 
 
 
 
 











 



Originale	Sostituto	Originale	Sostituto
	Power		Power
	3D		3D
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Eco		Shift + 3D
	Source		AV
	Vol+		Vol +
	Vol-		Vol -

Originale	Sostituto	Originale	Sostituto
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Info		Info
	Option		Options
	Smart TV		Smart
	Guide		Guide
	Menu		Menu
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Exit		Exit
	@/Home		Media
	Zoom-		Shift + Ch -





Originale	Sostituto
 Zoom+	 Shift + Ch +
 Sleep	 Sleep
 PRE-CH	 Pre Ch
 FAV	 Shift + Pre Ch
 List	 List
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 OO Lang	 Dual
 Subtitle	 Subt
 Text	 Text
 I<	 I<<
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 >I	 >>I

Originale	Sostituto
 <<	 <<
 Rec	 Rec
 >>	 >>

