 

 

 




 
 
 
 

 
 
 

 
 
 

 

 
 
 

 









Originale	Sostituto	Originale	Sostituto
	Power		Power
	3D		3D
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Eco		Shift + 3D
	Source		AV
	Vol+		Vol +
	Vol-		Vol -

Originale	Sostituto	Originale	Sostituto
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Info		Info
	Option		Options
	Smart TV		Smart
	Guide		Guide
	Menu		Menu
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Exit		Exit
	@/Home		Media
	Zoom-		Shift + Ch -





Originale	Sostituto
Zoom+	+ Shift + Ch +
Sleep	Sleep
PRE-CH	Pre Ch
FAV	+ Shift + Pre Ch
List	List
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
OO Lang	Dual
Subtitle	Subt
Text	Text
I<	I<<
Stop	Stop
Play	Play
Pause	Pause
>I	>>I

Originale	Sostituto
<<	<<
Rec	Rec
>>	>>

