 

 
 
 
 


 

 

 

 

 


 
 

 

 

 
 
 

 



 

 
 
 

 
 
 
 

 
 
 

 




Originale	Sostituto
 Power	 Power
 Play	 Play
 Audio In	 Red
 AUX	 Green
 Pause	 Pause
 Optical	 Yellow
 I<	 I<<
 >I	 >>I
 Bluetooth	 Blue
 HDMI IN	 1
 HDMI ARC	 3
 Vol+	 Vol +
 Mute	 Mute
 Vol-	 Vol -
 Sound	 Dual
 Treble+	 Ch +
 Treble-	 Ch -

Originale	Sostituto
 Audio Sync +	 Right
 Audio Sync -	 Left
 Bass+	 Up
 Bass-	 Down
 Settings Vol	 Menu
 Settings Delay	 Info
 Night	 Media
 DIM/Exit Settings	 Exit

