


 




Originale	Sostituto
 Power	 Power
 Power Tv	 Shift + Power
 AV	 AV / Input / RDS
 Tv/DVD	 TV/Radio /
 Open/Close	 Eject / Surround
 AV Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR+ Tv	 Shift + CH+ /
 4	 4
 5	 5
 6	 6
 PR- Tv	 Shift + CH- /
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 Vol+ Tv	 Vol+
 Rec	 Rec / Rec Mode
 0	 0
 Mute	 Mute / Dimmer
 Vol- Tv	 Vol-
 << Scan	 << / Tune-
 Scan >>	 >> / Tune+
 I<< Skip	 I<< / Preset-
 >>I Skip	 >>I / Preset+
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Home	 Menu / Home
 PR+	 CH+ / Page+
 Up	 Up
 Menu/List	 D.Menu / Top
 Left	 Left





Originale	Sostituto
	OK
	Right
	Back / Return
	CH- / Page-
	Down
	Display / Media
	Audio / Lang I/II
	Sound / Title
	+ Shift + Fav / Marker / PC
	Exit / Cancel / Clear
	Red / Netflix / Search
	Fav / Marker / PC
	Green / APP / Repeat
	+ Shift + Green / APP / Repeat
	Yellow / YouTube / Repeat
	Subtitle / EQ
	Blue / Prime Video / Random

Originale	Sostituto
	Text / Goto
	Guide / EPG / -/-

