
 


 





















 
 

 






 
 


 



































 








Originale		Sostituto		Originale		Sostituto	
	Standby		Power		2		2
	Mute		Mute / Dimmer		3		3
	Play		Play / Slow		4		4
	Pause		Pause / Step / Freeze		5		5
	Stop		Stop / Hold		6		6
	Mem		Rec / Rec Mode		7		7
	<< Scan		<< / Tune-		8		8
	Scan >>		>> / Tune+		9		9
	I<< Preset		I<< / Preset-		0		0
	Preset >>I		>>I / Preset+		REP/--		Green / APP / Repeat
	Open/Close		Eject / Surround		Speakers A/B		Yellow / YouTube / Repeat
	Auto (Tuner)		TV/Radio /		Dimmer		Shift + Mute / Dimmer
	Input		AV / Input / RDS		<< Scan		Shift + << /
	Info		Info / Angle		Scan >>		Shift + >> /
	Vol+		Vol+		I<< Preset		Shift + I<< / Preset-
	Vol-		Vol-		>>I Preset		Shift + >>I / Preset+
	1		1		FM/AM (Tuner)		Shift + 6





Originale	Sostituto
 Open/Close	 Eject / Surround
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Dimmer	 Shift + Mute / Dimmer
 REP/--	 Green / APP / Repeat
 Play	 Play / Slow
 Pause/Auto	 Pause / Step / Freeze
 Stop/FM/AM	 Stop / Hold

Originale	Sostituto
 Mem	 Rec / Rec Mode
 << Scan	 << / Tune-
 Scan >>	 >> / Tune+
 Mute	 Mute / Dimmer
 I<< Preset	 I<< / Preset-
 Preset >>I	 >>I / Preset+
 Vol+	 Vol+
 Vol-	 Vol-
 Standby	 Power
 Info	 Info / Angle
 Speakers A/B	 Yellow / YouTube / Repeat

