



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Green / Slow		Green
	I<<		I<<		Yellow / Repeat		Yellow
	>>I		>>I		Blue / A-B		Blue
	<<		<<		CH +		Ch +
	>>		>>		CH -		Ch -
	Eject		Eject		TV Menu		Menu
	Play / Pause		Play		Source		AV
	Play / Pause		Pause		Vol +		Vol +
	Stop		Stop		Vol -		Vol -
	TV/TXT /		Text		DTV		Smart
	Cancel / Zoom		Shift + Eject		DVD-Setup		D. Menu
	Reveal / Subtitle		Shift + Subt		Up		Up
	Hold / Menu		Options		Down		Down
	Size / Angle		Format		Right		Right
	Subpage / Title		Shift + Text		Left		Left
	Index / Goto		Media		OK		Ok
	Red / Program		Red		Exit		Exit





Originale	Sostituto	Originale	Sostituto
DISPLAY	Display	SHIFT + DISPLAY INFO	Shift + Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	SHIFT + TV/RADIO	Shift + Guide
	Recall		Back
	Picture	SHIFT + PICTURE FORMAT	Shift + Format
	Sound		Dual
	Nicam/A2	SHIFT + TIMER AV	Shift + AV
	Mute		Mute

Originale	Sostituto	Originale	Sostituto
	Sleep		Sleep
	Info		Info
	Subtitle		Subt
	Channel List		List
	EPG		Guide
	TV / Radio		TV/R
	FAV		Pre Ch

