


 




 

 

 
 


 
 
 
 
 

 

 

 
 




 
 


 
 




 


 







 
 

 



 









 

 


Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Mute	 Mute
 Input	 AV	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 [i+]	 Info
 3	 3	 Guide	 Guide
 4	 4	 Back	 Back
 5	 5	 Exit	 Exit
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 Ok
 Lang	 Dual	 Red	 Red
 TXT	 Text	 Green	 Green
 Home	 Smart	 Yellow	 Yellow
 Vol+	 Vol +	 Blue	 Blue
 Vol-	 Vol -	 Rakuten TV	 Shift + Smart

Originale	Sostituto	Originale	Sostituto
 Mute	 Mute	 TV	 DVD
 P+	 Ch +	 SAT	 AUX
 P-	 Ch -	 PLAY MODE	 REC MODE
 [i+]	 Info	 TV	 DUAL
 Guide	 Guide	 II	 SUBT
 Back	 Back	 ■	 OPT
 Exit	 Exit	 ◀	 AD
 Up	 Up	 ▶	 SETTINGS
 Down	 Down	 ◀	 SOUND
 Right	 Right	 LIST	 SUBT
 Left	 Left	 SEARCH	 PICTURE
 OK	 Ok	 SLEEP	 ECO
 Red	 Red	 TV/R	 FORMAT
 Green	 Green	 E-MANUAL	 3D
 Yellow	 Yellow	 REPEAT	 TIMER
 Blue	 Blue	 TEXT	 ZOOM
 Rakuten TV	 Shift + Smart	 TOP MENU	 DISPLAY INFO





Originale	Sostituto	Originale	Sostituto
 Netflix	 Media		
 YouTube	 Shift + Media		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

