 
 
 

 

 

 

 

 

 

 

 
 







































 

 









 

 













Originale	Sostituto
 Power	 Power
 Input 1	 Shift + 1
 Input 2	 Shift + 2
 Input 3	 Shift + 3
 Input 4	 Shift + 4
 Input 5	 Shift + 5
 PC	 Shift + Fav / Marker / PC
 HMG	 Shift + 6
 [i+]/Timer/Info	 Sleep / Timer
 [i+]/Timer/Info	 Info / Angle
 []	 Shift + Red / Netflix /
 [←]	 Shift + Yellow / YouTube /
 [↔]	 Shift + Green / APP /
 CTRL HDMI	 Picture / Format
 1	 1
 2	 2
 3	 3

Originale	Sostituto
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG/DVD Top Menu/Menu/Guide	 D.Menu / Top
 EPG/DVD Top Menu/Menu/Guide	 Guide / EPG / -/-
 0	 0
 TV/DTV/SAT	 AV / Input / RDS
 P+	 CH+ / Page+
 CH return	 Fav / Marker / PC
 Vol+	 Vol+
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Exit	 Exit / Cancel / Clear



 

 

 

 

 

 

 

 

 

 

 



 





 





	Originale	Sostituto	Originale	Sostituto
	Up			 Subtitle / EQ
	Tools	 Setup / OPT /		 >> / Preset+
	Left			 Shift + Display / Media
	Enter			 << / Tune-
	Right			 Shift + Smart / List
	Home	 Menu / Home		 >> / Tune+
	Down			 Text / Goto
	Return	 Back / Return		 Audio / Lang I/II
	Red	 Red / Netflix / Search		 Smart / List
	Rec	 Rec / Rec Mode		 Display / Media
	Green	 Green / APP / Repeat		
	Pause	 Pause / Step / Freeze		
	Yellow	 Yellow / YouTube / Repeat		
	Stop	 Stop / Hold		
	Blue	 Blue / Prime Video / Random		
	Play	 Play / Slow		
	I<<	 I<< / Preset-		







 



 

 



 

 





 

 

 

 

 









 

 



 



 

 

 







 



 





 

 





 

 



 

 







 

 

 



 



 
 

 

Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG/DVD Top Menu/Guide	 Guide / EPG / -/-
 EPG/DVD Top Menu/Guide	 D.Menu / Top
 0	 0
 Vol+ Tv	 Vol+
 Mute Tv	 Mute / Dimmer
 Vol- Tv	 Vol-
 Up	 Up

Originale	Sostituto
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu/Home	 Menu / Home
 Down	 Down
 Return	 Back / Return
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Play	 Play / Slow
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+











 



 


















 

 

 

 









 

 


 






Originale	Sostituto	Originale	Sostituto
 Power	 Power	 P-	 CH- / Page-
 [i+]/Timer/Info	 Info / Angle	 Mute Tv	 Mute / Dimmer
 [i+]/Timer/Info	 Sleep / Timer	 Vol- Tv	 Vol-
 1	 1	 X/Exit	 Exit / Cancel / Clear
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Menu/Home	 Menu / Home
 7	 7	 Down	 Down
 8	 8	 Return	 Back / Return
 9	 9		
 EPG/DVD Top Menu/Guide	 Guide / EPG / -/--		
 EPG/DVD Top Menu/Guide	 D.Menu / Top		
 0	 0		
 P+	 CH+ / Page+		
 Vol+ Tv	 Vol+		

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 P-	 CH- / Page-
 [i+]/Timer/Info	 Info / Angle	 Mute Tv	 Mute / Dimmer
 [i+]/Timer/Info	 Sleep / Timer	 Vol- Tv	 Vol-
 1	 1	 X/Exit	 Exit / Cancel / Clear
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Menu/Home	 Menu / Home
 7	 7	 Down	 Down
 8	 8	 Return	 Back / Return
 9	 9		
 EPG/DVD Top Menu/Guide	 Guide / EPG / -/--		
 EPG/DVD Top Menu/Guide	 D.Menu / Top		
 0	 0		
 P+	 CH+ / Page+		
 Vol+ Tv	 Vol+		





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Pause	 Pause / Step / Freeze
 1	 1	 Stop	 Stop / Hold
 2	 2	 Play	 Play / Slow
 3	 3	 I<<	 I<< / Preset-
 4	 4	 >>I	 >>I / Preset+
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 P+	 CH+ / Page+		
 Vol+ Tv	 Vol+		
 P-	 CH- / Page-		
 Mute Tv	 Mute / Dimmer		
 Vol- Tv	 Vol-		
 Rec	 Rec / Rec Mode		

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Pause	 Pause / Step / Freeze
 1	 1	 Stop	 Stop / Hold
 2	 2	 Play	 Play / Slow
 3	 3	 I<<	 I<< / Preset-
 4	 4	 >>I	 >>I / Preset+
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 P+	 CH+ / Page+		
 Vol+ Tv	 Vol+		
 P-	 CH- / Page-		
 Mute Tv	 Mute / Dimmer		
 Vol- Tv	 Vol-		
 Rec	 Rec / Rec Mode		

