 





 


 
 


 
 


 



 
 



 






 

 
 
 
 



 
 






 
 
 




 

 









 


 
 
 
 




 
 
 


 



 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		CH/Page-		Ch -
	Sleep		Sleep		Eco		3D
	CBL/SAT		1		Vol+		Vol +
	DVD		2		Vol-		Vol -
	Blu-ray		3		Mute		Mute
	Game		4		Info		Info
	AUX1		5		Option		Options
	Media Player		6		Back		Back
	TV Audio		7		Setup		Menu
	AUX2		8		Up		Up
	Tuner		9		Down		Down
	iPod/USB		Guide		Right		Right
	CD		0		Left		Left
	Bluetooth		Pre Ch		Enter		Ok
	Online Music		Smart		I<</Tune-		I<<
	Internet Radio		Media		Play		Play
	CH/Page+		Ch +		Pause		Pause





Originale		Sostituto		Originale		Sostituto	
	Power		Power		CH/Page-		Ch -
	Sleep		Sleep		Vol+		Vol +
	CBL/SAT		1		Vol-		Vol -
	DVD		2		Mute		Mute
	Blu-ray		3		Back		Back
	Game		4		Up		Up
	AUX1		5		Down		Down
	Media Player		6		Right		Right
	TV Audio		7		Left		Left
	AUX2		8		Enter		Ok
	Tuner		9		I<</Tune-		I<<
	iPod/USB		Guide		>>I/Tune+		>>I
	CD		0		Play		Play
	Bluetooth		Pre Ch		Pause		Pause
	Online Music		Smart		Smart Select 1		Shift + 1
	Internet Radio		Media		Smart Select 2		Shift + 2
	CH/Page+		Ch +		Smart Select 3		Shift + 3



