


 

 
 


 

 

 

 

 





 

 

 

 

 







Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Direct Tv Rec	 Eject / Surround
 Guide	 Guide / EPG / -/--
 Up	 Up
 Tv/Av	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [=]/Text	 Text / Goto

Originale	Sostituto
 [=◇]/F.P.	 Shift + Red / Netflix /
 [=i]/Index	 Shift + Green / APP /
 [=+]/Hold	 Shift + Yellow / YouTube /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 C	 Back / Return
 0/VCR	 0
 i	 Info / Angle
 CH+	 CH+ / Page+
 Vol+	 Vol+





Originale	Sostituto
CH-	CH- / Page-
Vol-	Vol-
[ + ]/Aspect	Picture / Format
N	Fav / Marker / PC
Power VCR	Shift + Mute / Dimmer
Power DVD	Shift + Power
Rec VCR	Shift + Rec / Rec Mode
Rec DVD	Rec / Rec Mode
Programme-	Shift + Display / Media
Programme-	Display / Media
Programme+	Shift + Smart / List
Programme+	Smart / List
<<</>>> VCR	Shift + <<< /
<<</>>> DVD	I<<< / Preset-
<<</>>> DVD	<<< / Tune-
<<</>>> VCR	Shift + I<<< / Preset-
>>>/>>>I VCR	Shift + >>> /

Tune+

Originale	Sostituto
>>>/>>>I DVD	>>> / Tune+
>>>/>>>I DVD	>>>I / Preset+
>>>/>>>I VCR	Shift + >>>I / Preset+
Stop VCR	Shift + Stop /
Stop DVD	Stop / Hold
Pause/Step VCR	Shift + Pause / Step /
Pause/Step DVD	Pause / Step / Freeze
Play VCR	Shift + Play /
Play DVD	Play / Slow

