



 








 


 
 

 
 



 


 
 



 



 


 





 


 
 
 



 

 
 
 













Originale		Sostituto		Originale		Sostituto	
	Power		Power		Blue / Title		Blue
	HDMI Control		D. Menu		1		1
	Record		Rec		2		2
	Play		Play		3		3
	Pause		Pause		4		4
	Stop		Stop		5		5
	I<<		I<<		6		6
	<<		<<		7		7
	>>		>>		8		8
	>>I		>>I		9		9
	Screen		Format		0		0
	Lang		Dual		Text		Text
	Subtitle		Subt		Swap		Pre Ch
	Internet		Media		Up		Up
	Red/Zoom/↑		Red		Down		Down
	Green/Repeat/↓		Green		Right		Right
	Yellow / Root		Yellow		Left		Left





Originale		Sostituto		Originale	Sostituto
	Ok		Ok		
	P/Ch+		Ch +		
	P/Ch-		Ch -		
	Vol+		Vol +		
	Vol-		Vol -		
	Mute		Mute		
	Menu		Menu		
	Source		AV		
	Return		Back		
	Epg		Guide		
	Info		Info		
	Sleep		Sleep		
	3D		3D		
	Search Mode		TV/R		
	Music/Movie/Phot		Smart		
	Display	+	Shift + Info		
	Presets		Options		

